SPIRIT MEDICAL SYSTEMS GROUP

A Heritage of Quality | The Spirit of Innovation

MS300 Rehabilitation Seated Stepper

USER'S MANUAL

PLEASE READ THIS ENTIRE MANUAL CAREFULLY BEFORE OPERATING YOUR NEW SEMI-RECUMBENT STEPPER AND SAVE IT FOR FUTURE USE.

Table of Contents

Product Registration……. 2

Important Safety Instructions…… 3

Important Electrical Information…… 4

Important Operation Instructions…….. 4

Features…….. 5

Operation of Your New Stepper…….…… 8

MS300 Assembly Instructions……. 17

MS300 Drawing & Parts List…… 23

Maintenance…… 30

Specifications…….. 31

Manufacturer's Limited Warranty…….. 32

Thank you for your recent purchase of this high quality Semi-Recumbent Seated Stepper, the MS300, from Spirit Medical Systems Group.

Your new product was manufactured by one of the leading fitness and medical products manufacturers in the world. Further, it is backed by one of the most comprehensive warranties in the industry. Through our dealers, distributors and manufacturer's representatives, we will do all we can to provide many years of successful and prosperous ownership. Your warranty and service needs will be addressed collaboratively through your regional sales representative and our highly trained service technicians.

The responsibility of that collaborative team is to provide you with both the technical knowledge and access to service personnel to make your ownership experience more informed, and resolution of any difficulties easier to remedy.

Two components of the Spirit Medical Systems Group's mission statement are "enhancing patient outcomes and improving effectiveness in the delivery of services". This is just one of the many products that will assist you in providing that care to your patients and/or clients.

Please take a moment at this time to record the name of the dealer, distributor, or manufacturer's representative, their telephone number, and the date of purchase below to make any future, needed contact easy. We appreciate your support and we will always remember that you are the reason that we are in business.

Please complete and mail your registration card today and enjoy your new MS300.

Yours in Health and Wellness,
Spirit Medical Systems Group

Product Registration

RECORD YOUR SERIAL NUMBER

Please record the Serial Number of this fitness product in the space provided below. You can find the serial number on a sticker that is located on the front left side of the product.

Serial Number_____

REGISTER YOUR PURCHASE

The self-addressed product registration card must be completed in full and returned to Spirit or visit: www.spiritmedicalsystems.com to register online.

Important Safety Instructions

⚠ ***ATTENTION*** **- Read all instructions in this manual before using this device.**

⚠ ***DANGER*** **- To reduce the risk of electric shock disconnect the product from the electrical outlet prior to cleaning and/or service work.**

⚠ ***WARNING*** **- To reduce the risk of burns, fire, electric shock, or injury to persons, install the unit on a flat level surface with access to a 110 to 230-volt AC, 50/60 Hz, 15-amp outlet. The unit should be the only appliance in the electrical circuit.**

- Use this device only for it's intended use as described in this manual.
- Keep children away from the device. There are moving parts, obvious pinch points and other caution areas that can cause harm.
- Except as instructed for use of the device, keep hands away from all moving parts.
- Keep the electrical cord away from heated surfaces and out of all travel lanes and do not operate the device if the cord or plug is damaged.
- Never drop or insert any object into any openings.
- Do not use outdoors.
- To disconnect, turn all controls to the off position then remove the plug from the outlet.
- This device is designed for commercial use and will meet the demands of orthopedic, sports wellness and general conditioning programs.
- Do not attempt to use the device for any purpose other than for the purpose it is intended.
- The pulse sensors are not medical devices. Various factors, including the user's movement, may affect the accuracy of heart rate readings. The pulse sensors are intended only as exercise aids in determining heart rate trends in general.
- WARNING: Heart rate monitoring system may be inaccurate. Over exercise may result in injury or death. If you feel faint stop exercising immediately.
- Ensure there is a minimum space on the sides of the unit of two feet for proper operation, easy access and to prevent possible injuries to others standing or walking nearby. There should be a minimum of at least one foot of free space at the front and rear of the unit.
- Do not use any after market parts on this device, other than those recommended by Spirit.
- Do not attempt any servicing or adjustments other than those described in this manual. All else must be left to trained service personnel familiar with electro-mechanical equipment and authorized under the laws of the country in question to carry out maintenance and repair work.
- To avoid injury please observe all minimum and maximum seat and arm adjustment settings.

Important Electrical Information

WARNING!

⚠ **NEVER** remove any cover without first disconnecting AC power. If voltage varies by ten percent (10%) or more, the performance of your bike may be affected. **Such conditions are not covered under your warranty.** If you suspect the voltage is low, contact your local power company or a licensed electrician for proper testing.

⚠ **NEVER** expose this product to rain or moisture. This product is **NOT** designed for use outdoors, near a pool or spa, or in any other high humidity environment. The temperature specification is 40 degrees c (104 deg f), and humidity is 95%, non-condensing (no water drops forming on surfaces).

Important Operation Instructions

- **NEVER** use the device during an electrical storm. Surges may occur in your facility power supply that could damage the unit's components.
- **All users** should have medical clearance before starting any rigorous exercise program.
- **Start the user** at a safe exercise level. Do not allow the user to be over exerted. Symptoms to watch for, but not limited to, are: Shortness of breath or difficulty in breathing, pain or discomfort, feeling faint.
- **Make sure** the user warms up and cools down properly to avoid over taxing the cardio vascular system. Allow three to five minutes of warm up and cool down during each exercise session.

Features

MS300– Rehabilitation Seated Stepper

Parts and Adjustments:

1. Electronic Console
2. Upper Body Rotating Handles
3. Handle Length Adjustment
4. Cushioned Footplates with straps
5. Swivel Seat with seat belt
6. Lifting Handle for transport
7. Leveling Glides

Optional Parts (not shown):

Wrist cuffs
Calf Supports

The Spirit MS300 is an easy product to set up and use, from the adjustments to the intuitive interface. This section explains how to set up, adjust and operate your MS300 from Spirit Medical Systems Group.

Leveling the MS300:

- Once the MS300 is assembled, and placed on a flat level floor, it may be necessary to adjust the leveling glides on the bottom of the unit to ensure proper stability of the MS300. Use a 1/2" wrench to loosen the top nut of the levelers. Make sure the two center levelers are screwed all the way in. Adjust the 4 corner levelers by hand as necessary to remove any wobble in the unit. Unscrew the 2 center levelers until they touch the floor. Then tighten all the top nuts against the bottom of the stabilizer tubes. Make sure the bottom nut remains cinched against the leveling foot.

Connecting to A.C. Power:

- The MS300 uses a universal switching power supply. You can plug the MS300 power supply into any A.C. power source from 90 to 260 volts, 47 to 63 Hz. The A.C. input is located in the front of the unit.

Seat Adjustments:

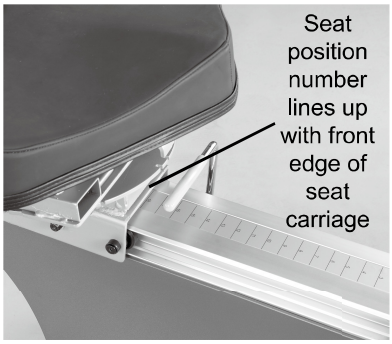

Adjusting the seat fore/aft position:

- Lift the yellow handle below the front of the seat. Move the seat to the desired position and lower the handle. Move the seat slightly until the seat lock clicks in place. There is a numbered scale located on the aluminum seat slide tube for repeatable settings. Seat position is indicated by the front of the seat carriage lining up with the number on the scale.

Adjusting the seat back angle:

- To adjust the seat back angle, squeeze the brake handle located on the right side handle bar and move the seat back to the desired position. There is a numbered scale located just below the seat back cushion for repeatable settings.

Rotating the swivel seat:

- Lift the handle behind the seat to disengage the latch. Rotate the seat to the desired position; lower the handle when approaching position to activate latch. The seat will latch into place every 45 degrees

Pedal strap adjustment:

- The ankle and foot Velcro straps are easily opened and closed for quick patient set up. Remove the ankle strap from the chrome ring. Loosen the foot strap enough so the patient's foot can slide under. Once the foot is in the correct position reattach the ankle strap and adjust both straps for a snug fit.

Seat Belt adjustment:

- Simply snap the buckles together and adjust the strap to the desired fit.

Rotating Handle:

- Handles rotate to allow wrist patients to use upper body without discomfort.

- **MS300 Electronic Console:**

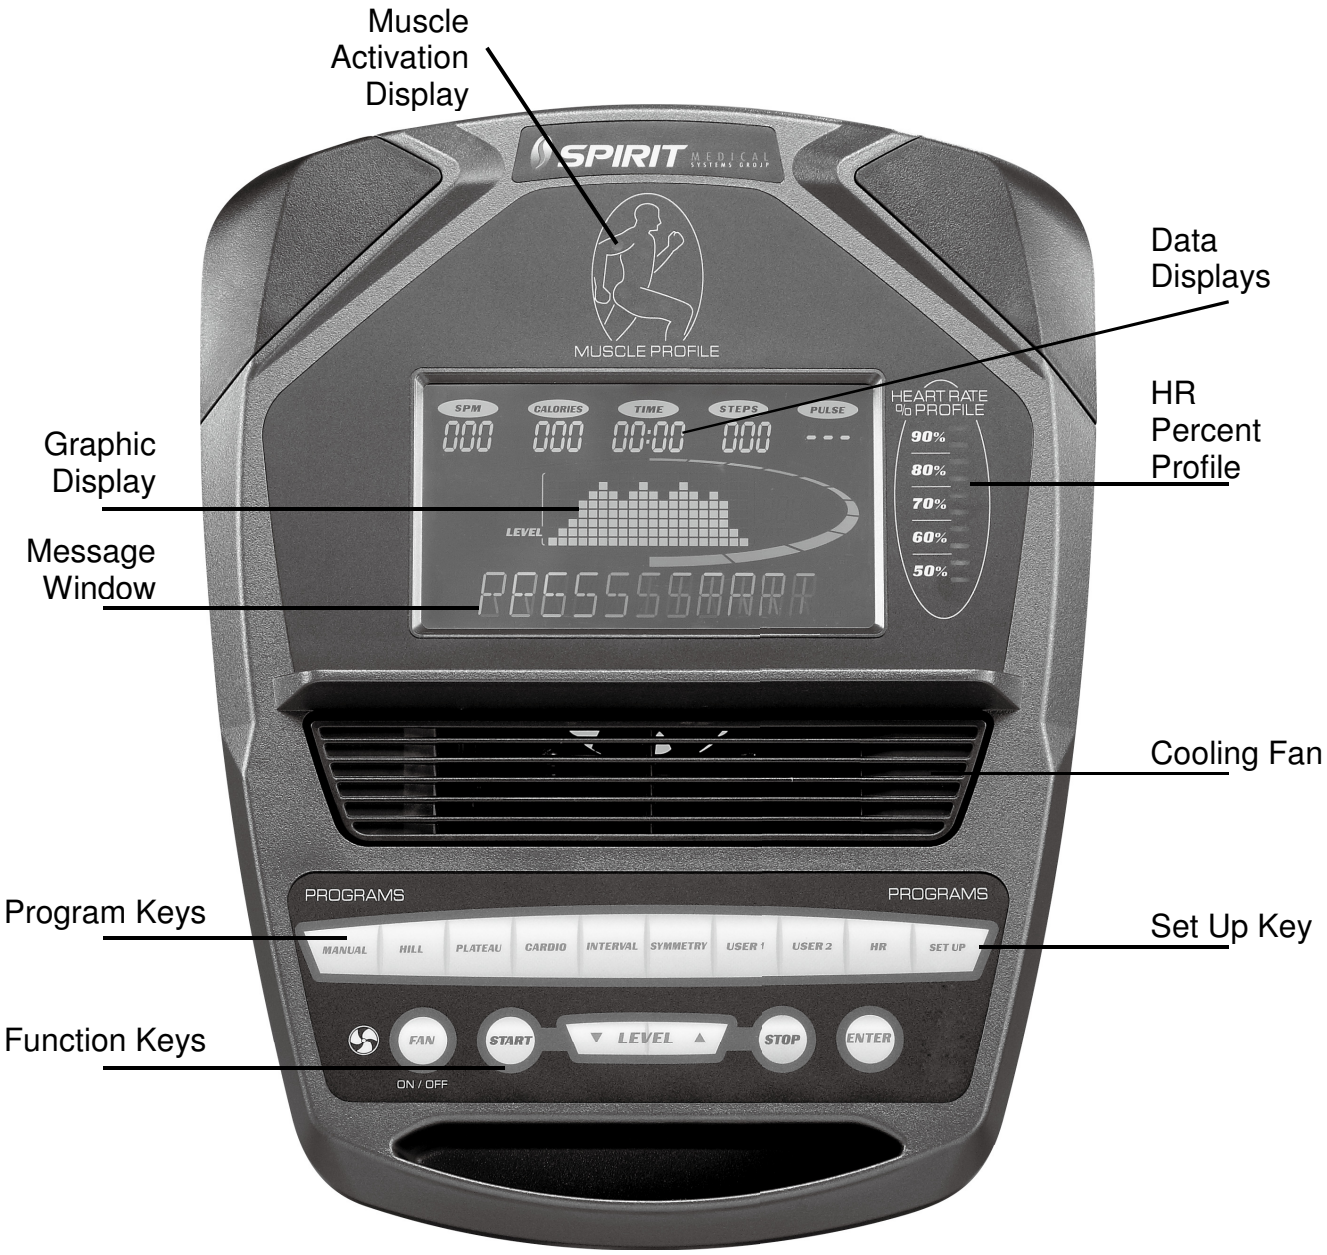

Power on

When initially powered on the console will perform an internal self-test. During this time all the lights will turn on for a short time. The message window will then show a software version (i.e. VER 1.0) and the Time window will display the total hours the unit has been used to date.

The odometer will remain displayed for only a few seconds then the console will go to the start up display, also known as Idle Mode. The dot matrix display will be scrolling through the different program profiles and the message window will be scrolling the start up message. You may now begin to use the MS300.

The console will automatically power down after 20 minutes of inactivity. Press any key to wake the console up again. Always disconnect the main power when the MS300 is not in use.

Console Operation:

1. Set Up Key

The Set Up key function will allow you to set seat and arm adjustments for various patient heights and customize the settings of the MS300. When the Set Up key is pressed the first option in the menu appears. Use the up/down arrows to scroll through the menu and press the enter key to select an option.

Set Up menu:

Position (seat and arm position setting):

User may input their height in inches (or centimeters if unit is set to metric measurements, see page 30) and the software will calculate the position for the seat and arms. This feature is intended to aid in patient set up but may not be the final settings as patient's body symmetry may vary slightly.

Track or Step graph

The segmented track surrounding the profile display area can be set to display as a track or a foot position indicator. During any program press the Symmetry key to switch the display.

2. Quick Start

This is the quickest way to start an exercise session. After the console powers up you just press the Start key to begin; this will initiate the Quick Start mode. In Quick Start, the Time will count up from zero, all workout data will start to accrue and the workload may be adjusted manually by pressing the Up or Down key. The dot matrix will display a workload level at the lowest resistance. As you increase the workload more rows will light indicating a harder workout. The unit will get harder to pedal as the rows increase.

The graphic display has 20 columns of lights with each column representing 1 minute in the Quick Start program (time per column can be modified in other programs). At the end of the 20th column (or 20 minutes of work) the display will wrap around and restart at the first column again. There are 20 levels of resistance displayed in 10 rows of lights.

3. Basic information

The **Graphics Display** (dot matrix) is used for displaying work profiles and the Symmetry graph. When you begin a program the dot matrix will display a workload profile. The profile indicates the different resistance level changes during a program. The peak resistance level can be set during program setup. The peak setting can be adjusted during your workout also. When adjusting the peak level during a program the profile picture will not change, but the message window will display your new level setting.

The **Data Display** windows provide exercise information during a session. Information includes: SPM (Steps Per Minute), Calories, Time, Steps (total step count) and Pulse. Resistance level and Watt measurements are displayed on either side of the graphic display.

The **Message Window** is the main display for programming instructions and relevant measurements during a program. The measurement data shown varies depending on the program. Measurements include: Average Watts (Left and Right leg), METs, Symmetry and Segment time.

To the right of the Dot matrix display is a **Heart Rate Bar Graph.** Simply grasping the hand pulse sensors, or wearing a heart rate chest belt transmitter, will start the heart rate measurement function (this may take a few seconds). The Pulse window will display the heart rate in beats per minute. The Bar Graph represents the percentage of maximum heart rate. NOTE: Enter the correct age in Set Up for the Bar Graph to be accurate. Refer to Heart Rate section for details about these features.

The **Muscle Activation** Display at the top of the console provides a quick look at level of activation for different muscle groups.

Function Keys:
The **Stop**/**Reset** key provides several functions.

- Pressing the Stop/Reset key once during a program will **Pause** the program. To resume the exercise session just press the Start key.
- If the Stop/Reset button is pressed twice during a workout the program will end and a summary of information for the exercise session will be displayed.
- If the Stop/Reset key is held down for 3 seconds the console will perform a complete **Reset.**
- During data entry for a program the Stop/Reset key performs a **Previous Screen** function. This allows you to go back one step in the programming each time you press the Stop/Reset key.

The **Program Keys** may be used to preview each program when in the idle mode. Press each program key to preview what the program profile looks like. To begin a program press the corresponding program key and then press the Enter key to select the program.
The program keys also function as a **Number Key Pad** when you are in the data-setup mode. If you are entering new data such as Time, Age, weight etc., you can use these keys to enter the numbers quickly. The Manual key would enter the number 1, Hill key is number 2, etc.

4. Selecting and customizing programs

When you enter a program you have the option of modifying the settings. If you want to begin without entering new settings just press the Start key. This will bypass the programming of data and take you directly to the start of the program. If you want to change the settings just follow the instructions in the message window. If you start a program without changing the settings the data from the Set Up menu will be used.

Manual

The Manual program works as the name implies, manually. This means that you control the workload yourself, not the computer. To start the Manual program follow the instructions below or just press the Manual button then the Enter button and follow the directions in the message window.

1. Press the **Manual** key then press the **Enter** key.
2. The message window will prompt you to enter the Age, Weight and Time for the program.

You may enter the Age using the Up and Down keys or the numeric key pad then press the Enter key to accept and proceed to the next screen.

3. Now you are finished editing the settings and can begin the program by pressing the Start key. You can also go back and modify your settings by pressing the Enter key. NOTE: At any time during the editing of Data you can press the Stop key to go back one level, or screen.
4. During the Manual program you will be able to scroll through the data in the message window by pressing the **Enter key**.
5. When the program ends you may press Start to begin the same program again or Stop to exit the program, or you can save the program you just completed as a custom program by pressing the User keys and following the instructions in the message window.

Preset Programs

The Semi-Recumbent Seated Stepper has four preset exercise programs that have been designed for a variety of workout goals. The initial built-in level of difficulty for each program is set to a relatively easy level. You may adjust the level of difficulty (Max level) for each program before beginning.

The profiles shown in the dot matrix are merely pictures of the whole profile and will not change in size when the work level keys are pressed. When setting up a program you will enter the maximum resistance setting for the peak of the profile. During the program the resistance levels will change as the profile progresses. When the level up key is pressed to request more resistance the profile picture will not change, but the workload will increase. The message window will display the level setting for the current segment and also the maximum level for the peak of the profile. Pressing the work keys actually change the peak level of the program not the current segment level. You may need to change the peak setting several times before the current segment increases.

HILL

The **Hill** program simulates going up and down a hill. The resistance in the pedals and upper body arms will steadily increase and then decrease during the program.

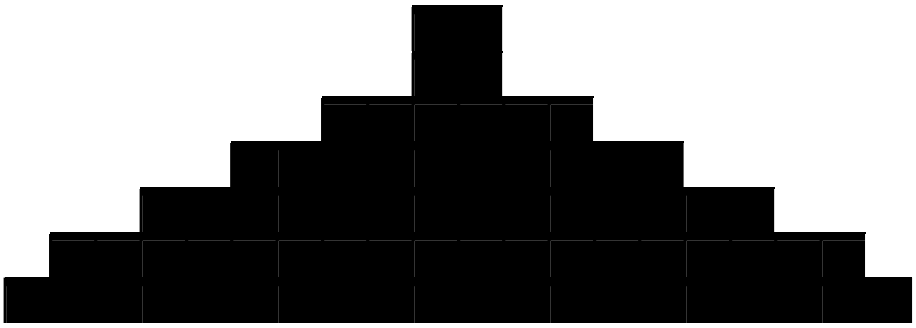

PLATEAU

The **Plateau** program provides a steady state exercise with warm up and cool down periods.

CARDIO

The **Cardio** program is designed to increase Cardio vascular function. This is exercise for heart and lungs. It will build up heart muscle and increase blood flow and lung capacity. This is achieved by incorporating a higher level of exertion with slight fluctuations in work.

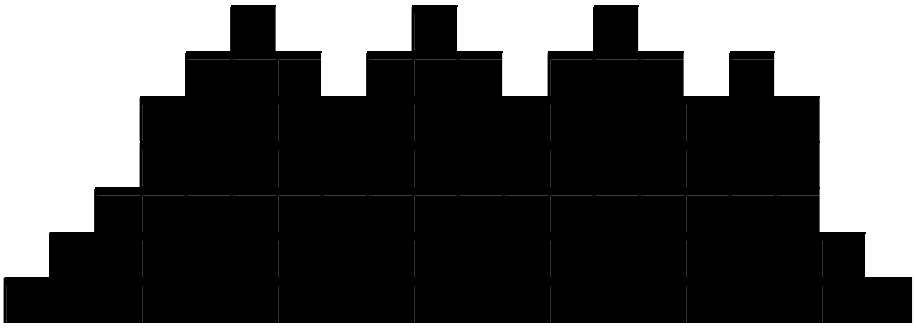

INTERVAL

The **Interval** program takes you through high levels of intensity followed by periods of low intensity. This program increases endurance by depleting oxygen levels followed by periods of recovery to replenish oxygen. The cardio vascular system gets programmed to use oxygen more efficiently this way.

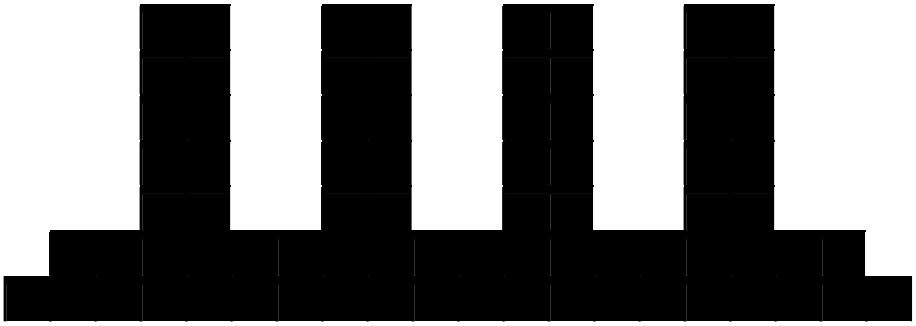

Programming Preset Programs:

1. Select the desired program button then press the **Enter** key.
2. The message window will prompt you to enter the Age, Weight, Time and Max Level for the program. You may enter the Age using the Up and Down keys or the numeric key pad then press the Enter key to accept and proceed to the next screen.
    a. Max Level refers to the top resistance level setting for the program.
3. Now you are finished editing the settings and can begin the program by pressing the Start key. You can also go back and modify your settings by pressing the Enter key. NOTE: At any time during the editing of Data you can press the Stop key to go back one level, or screen.
4. During the Manual program you will be able to scroll through the data in the message window by pressing the **Enter key**.
5. When the program ends you may press Start to begin the same program again or Stop to exit the program, or you can save the program you just completed as a custom program by pressing the User keys and following the instructions in the message window.

User Programs

The User1&2 programs allow you to build and save a custom program. You can build your own custom program by following the instructions below or you can save any other preset program you complete as a custom program. The User program allows you to further personalize it by adding your facility name.

Designing and saving a new program:

1. Press either User key. The message window will show a welcome message; if you had previously saved a program the message will contain the name you gave it. Then press the **Enter** key to begin programming.
2. When you press enter, the message window will show “Name – A”, if there is no name saved. If the name “Custom Workout” had been previously saved the message window will show “Name – Custom Workout” and the C in Custom will be blinking. If there is a name saved you can change it or you may press the Stop key to keep the name and continue to the next step. If you want to enter a name use the Up and/or the Down key to change the first letter then press Enter to save the first letter and continue to the next letter. When you have finished entering the name press the Stop key to save the name and continue to the next step.
3. The message window will ask you to enter an **Age**. You may enter an Age, using the Up and Down keys or the numeric key pad, then press the Enter key to accept the new number and proceed on to the next screen.
4. You are now asked to enter a **Weight**. You may adjust the Weight number using the Up and Down keys or the numeric key pad then press enter to continue.
5. Next is **Time**. You may adjust the Time and press enter to continue.
6. Now you are asked to adjust the **Max Level.** This is the peak exertion level you will experience during the program. Adjust the level and then press enter.
7. Now the first column will be blinking and you are asked to adjust the level for the first segment of the workout. When you finish adjusting the first segment, or if you don’t want to change, then press enter to continue to the next segment.
8. The next segment will show the same level as the previously adjusted segment. Repeat the same process as the last segment then press enter. Continue this process until all twenty four segments have been set.
9. The message window will then tell you to press enter to save the program. After saving the program the message window says “New program saved” then will give you the option to Start or modify the program. Pressing Stop will exit to the start up screen.
10. During the Facility program you will be able to scroll through the data in the message window by pressing the **Enter** key.

Running a saved program:

1. Press User key then Enter
2. Enter Time then press start to begin program.

Symmetry

The Symmetry program may aid in achieving a more balanced exercise stroke for patients with bi-lateral deficiencies, such as stroke patients and post-op knee patients. The program will measure the left and right power through the pedal range. The Dot Matrix display will show a graph indicating the leg power symmetry so the user has a visual feedback to aid in improving the involved limb's strength. The program will also work for upper body only. When pushing the handles, the graph will be reversed (Left side will actually be displaying right arm information). It will be correct if the patient is pulling.

1. Press the Symmetry key then press the **Enter** key.
2. The message window will prompt you to enter the Age, Weight and Time for the program. You may enter the Age using the Up and Down keys or the numeric key pad then press the Enter key to accept and proceed to the next screen.
3. Now you are finished editing the settings and can begin by pressing the Start key. You can also go back and modify your settings by pressing the Enter key. NOTE: At any time during the editing of Data you can press the Stop key to go back one level, or screen.
4. During the program you will be able to scroll through the data in the message window by pressing the **Enter key**.
5. When the program ends you may press Start to begin the same program again or Stop to exit the program, or you can save the program you just completed as a **User** program by pressing a User key and following the instructions in the message window.

Biofeedback Graph:

Below is a sample picture showing the symmetry graph. In the message window there is an average watt measurement and it is indicating that the left leg is producing more power than the right leg, 41 vs. 34 watts. The graph reflects the higher wattage of the left leg. If the power is equal in both legs only two dots would be lit on the bottom center of the graphic screen. Press the Enter key to view the Symmetry data.

Using a Heart Rate Transmitter

*NOTE: The chest strap transmitter is not a standard part, but is a separate purchase.
How to wear your wireless chest strap transmitter:

1. Attach the transmitter to the elastic strap using the locking parts.
2. Adjust the strap as tightly as possible as long as the strap is not too tight to remain comfortable.
3. Position the transmitter with the logo centered in the middle of your body facing away from your chest (some people must position the transmitter slightly left of center). Attach the final end of the elastic strap by inserting the round end and, using the locking parts, secure the transmitter and strap around your chest.
4. Position the transmitter immediately below the pectoral muscles.
5. Sweat is the best conductor to measure very minute heart beat electrical signals. However, plain water can also be used to pre-wet the electrodes (2 black square areas on the reverse side of the belt and either side of transmitter). It's also recommended that you wear the transmitter strap a few minutes before your work out. Some users, because of body chemistry, have a more difficult time in achieving a strong, steady signal at the beginning. After "warming up", this problem lessens. As noted, wearing clothing over the transmitter/strap doesn't affect performance.
6. Your workout must be within range - distance between transmitter/receiver – to achieve a strong steady signal. The length of range may vary somewhat but generally stay close enough to the console to maintain good, strong, reliable readings. Wearing the transmitter immediately against bare skin assures you of proper operation. If you wish, you may wear the transmitter over a shirt. To do so, moisten the areas of the shirt that the electrodes will rest upon.
   Note: The transmitter is automatically activated when it detects activity from the user's heart. Additionally, it automatically deactivates when it does not receive any activity. Although the transmitter is water resistant, moisture can have the effect of creating false signals, so you should take precautions to completely dry the transmitter after use to prolong battery life (estimated transmitter battery life is 2500 hours). If your chest strap has a replaceable battery the replacement battery is Panasonic CR2032.

Erratic Operation:

Caution! **Do not use the MS300 for Heart Rate Control unless a steady, solid Actual Heart Rate value is being displayed. High, wild, random numbers being displayed indicate a problem.**

Areas to look at for interference, which may cause erratic heart rate:

(1) Microwave ovens, TVs, small appliances, etc.
(2) Fluorescent lights.
(3) Some household security systems.
(4) Perimeter fence for a pet.
(5) Some people have problems with the transmitter picking up a signal from their skin. If you have problems try wearing the transmitter upside down. Normally the transmitter will be oriented so the Spirit logo is right side up.
(6) The antenna that picks up your heart rate is very sensitive. If there is an outside noise source, turning the whole machine 90 degrees may de-tune the interference.
(7) If there is another person wearing a chest strap within 1 meter, it will interfere.
(8) If you continue to experience problems contact your dealer.

Heart Rate Program operation

To start the **HR** program follow the instructions below or just press the HR key then the Enter button and follow the directions in the message window.

1. Press the **HR** key then press the **Enter** key.
2. The message window will ask you to enter your **Age**. You may enter your Age, using the Up and Down keys or the numeric key pad, then press the Enter key to accept the new number and proceed on to the next screen.
3. You are now asked to enter your **Weight**. You may adjust the Weight number using the Up and Down keys or the numeric key pad, then press enter to continue.
4. Next is **Time**. You may adjust the Time and press enter to continue.
5. Now you are asked to adjust the **Heart rate Level.** This is the heart rate level you will experience during the program. Adjust the level and then press enter.
6. Now you are finished editing the settings and can begin your workout by pressing the Start key. You can also go back and modify your settings by pressing the Enter key. NOTE: At any time during the editing of Data you can press the Stop key to go back one level, or screen.
7. If you want to increase or decrease the workload at any time during the program press the Up or Down key. This will allow you to change your target heart rate at any time during the program.
8. During the HR program you will be able to scroll through the data in the message window by pressing the adjacent **Display key.**
9. When the program ends you may press Start to begin the same program again or Stop to exit the program or you can save the program you just completed as a custom user program by pressing a User key and following the instructions in the message window.

ASSEMBLY INSTRUCTIONS FOR MS300

1) Hardware

STEP 1.



#129- M6 x 40L (2PCS)



#132- 3/8" x 2" (4PCS)



#135- 5/16" x 1-1/4" (1PCS)

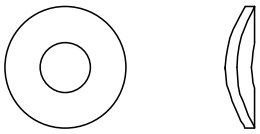

#185-5/16" x 19 x 1.5T (4PCS)

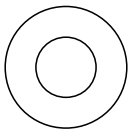

#170-3/8" x 19 x 1.5T (6PCS)

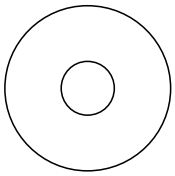

#173-8.5 x 26 x 2T (2PCS)



#181-M5 x 15L (12PCS)



#140-3/8" x 3-1/4" (2PCS)



#190-3/8" x 7T (6PCS)



#193-5/16" x 6T (1PCS)

#187-M6 x 6T (2PCS)

STEP 2.



#152-5/16" x 1-3/4" (2PCS)



#153-M8 x 12L (2PCS)



#154-3/8" x 2-1/2" (2PCS)

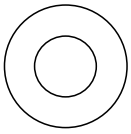

#170-3/8" x 19 x 1.5T (2PCS)

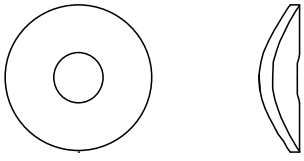

#184-8 x 23 x 1.5T (2PCS)



#190-3/8" x 7T (2PCS)

#193-5/16" x 6T (2PCS)

#194-3/8" x 2T (2PCS)

STEP 3.



#122-M6 x 25L (4PCS)

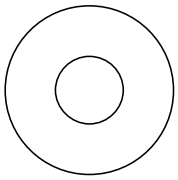

#167-10 x 25 x 2T (2PCS)



#190-3/8" x 7T (2PCS)



#197-3/8" x 1-3/4" (2PCS)

STEP 4.



#143-M5 x 12L (4PCS)

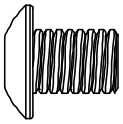

#216-3/8" x 5/8" (8PCS)

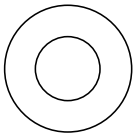

#217-3/8" x 19 x 1.5T (4PCS)

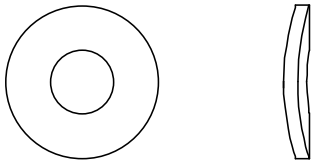

#218-3/8" x 23 x 2.0T (4PCS)

2) Assembly

STEP 1: PEDALS, SEAT LATCH HANDLE AND HANDLE BAR ASSEMBLY

1. ***This section is easier if you slide the seat carriage (20) all the way back before starting.** Slide the handle bar assembly (17) onto the receiving tubes of the seat frame (20). Secure the handle bar assembly starting with the two 3/8" x 3-1/4" bolts (140) (install from the inside hole of the receiving tube), two flat washers (170) and nylon nuts (190). **Install the safety cover (108) and seat belts (233) onto bolts before assembling washers and nuts.** Install the four 3/8" x 2" bolts (132) from the top side of the tubes and assemble the four 3/8" flat washers (170) and 3/8" nylon nuts (190).
2. Attach the end of the seat back gas shock (109) to the seat back angle adjustment bracket of the handle bar assembly (17) using 5/16" x 1-1/4" bolt (135), two 5/16" flat washers (173) and 5/16" nylon nut (193).
3. Assemble swivel seat latch handle (22) to the seat assembly (20) with the two 6mm x 40mm bolts (129), four 6mm curved washers (185) and two 6mm nylon nuts (187)
4. Plug the hand pulse connectors from the handle bars into the mating connectors of the seat carriage.
5. Assemble the rubber isolators (82) and pedals (28) to the pedal foot plates with six M5 phillips screws (181) per side.
6. Press the four stabilizer end caps (31) into the stabilizer tubes. May tap in with a rubber mallet.

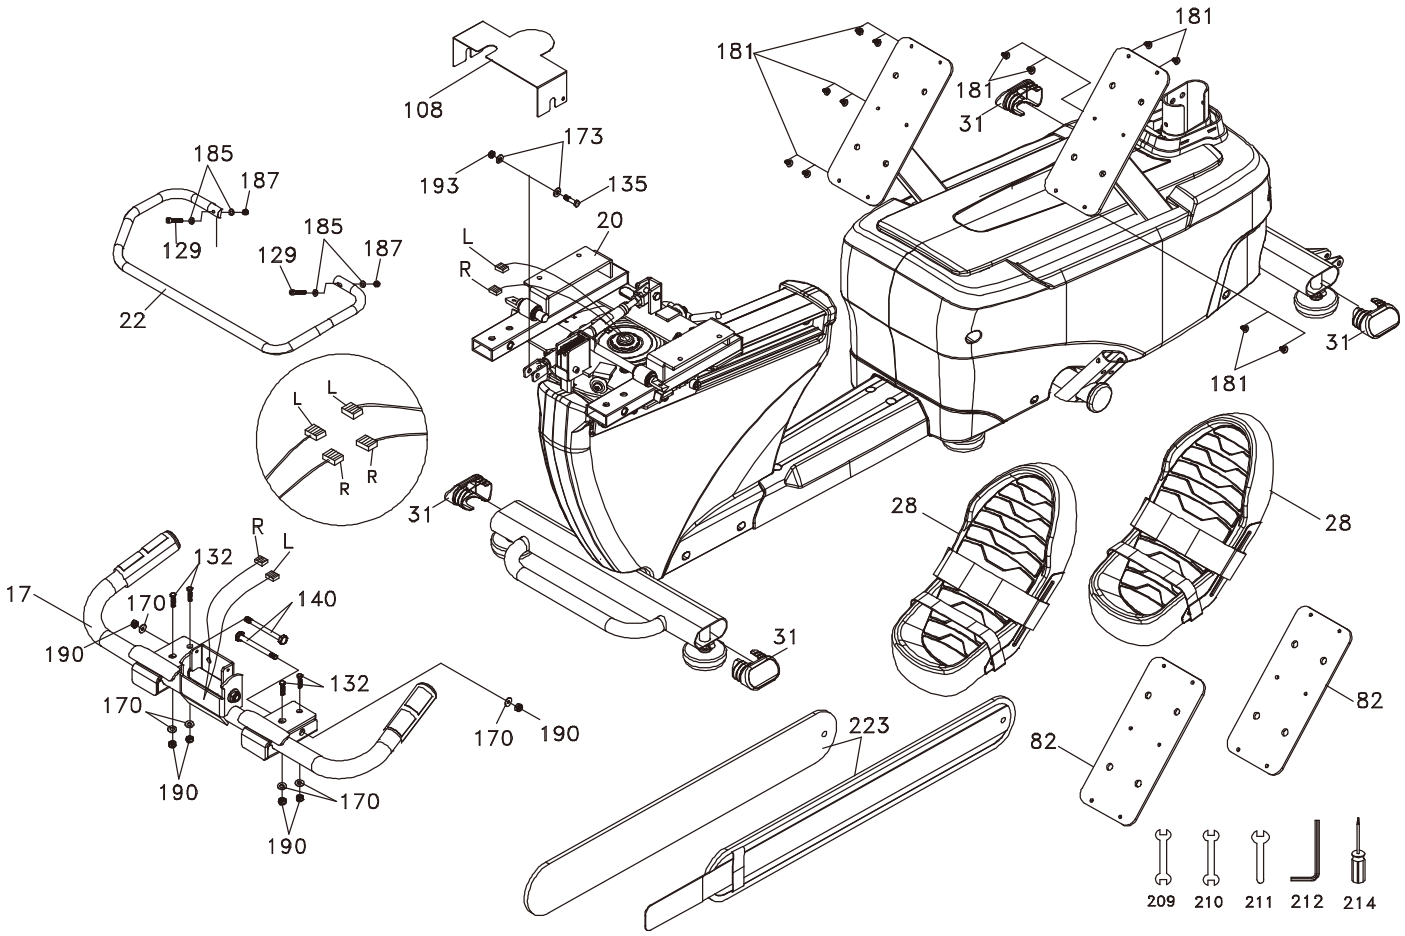

STEP 2: CONSOLE MAST & TRANSPORT WHEELS ASSEMBLY

1. Install the transport wheels (77) using the 5/16” x 1-3/4” bolts (152) and 5/16” nylon nuts (193).
2. Slide the console mast cover (74) onto the console mast (2); be sure the cover orientation on the mast is correct otherwise it won’t clip in place later.
3. Snake the computer cable through the console mast and slide the mast onto the receiving brackets. Make sure the cable does not get pinched in between the mast and bracket.
4. Fasten the mast with the two 3/8” x 2-1/2” bolts (154), 3/8” split washers (194) and 3/8” flat washers (170) from the left side of the mast and secure with the two 3/8” nylon nuts (190). Install the two 8mm x 12mm bolts (153) and curved washers (184) through the front and rear holes in the mast.

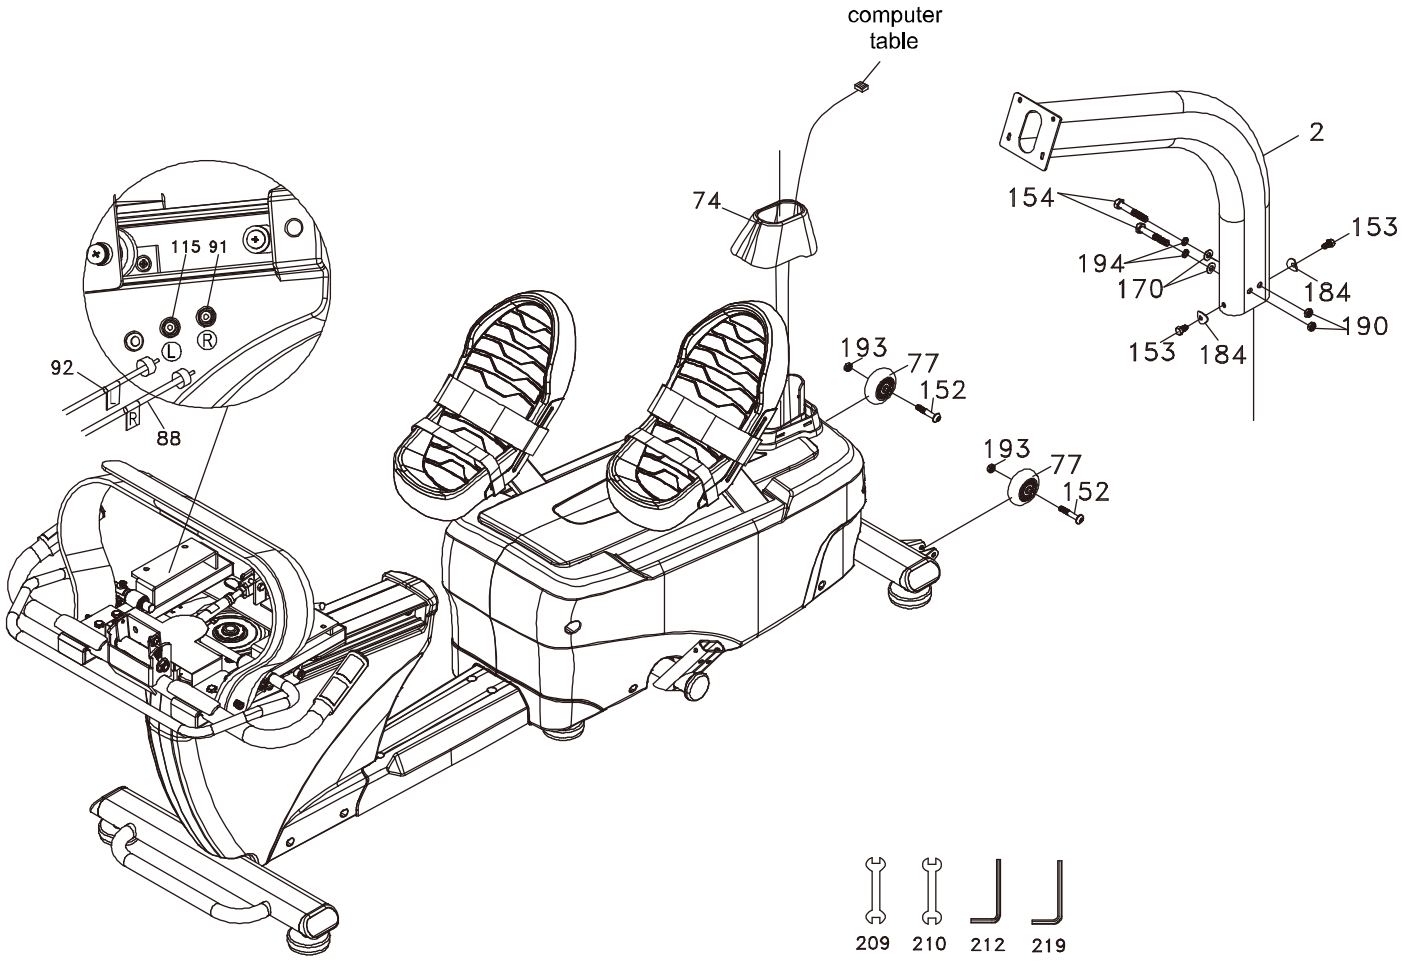

STEP 3: SEAT BACK AND BOTTOM CUSHION ASSEMBLY

1. Slide the seat back assembly (94) into the seat back angle adjustment bracket and secure with the two 3/8” x 1-3/4” bolts (197), 3/8” washers (167) and 3/8” nuts (190).
2. Assemble the seat cushion (93) onto the seat frame with four M6 bolts (122).

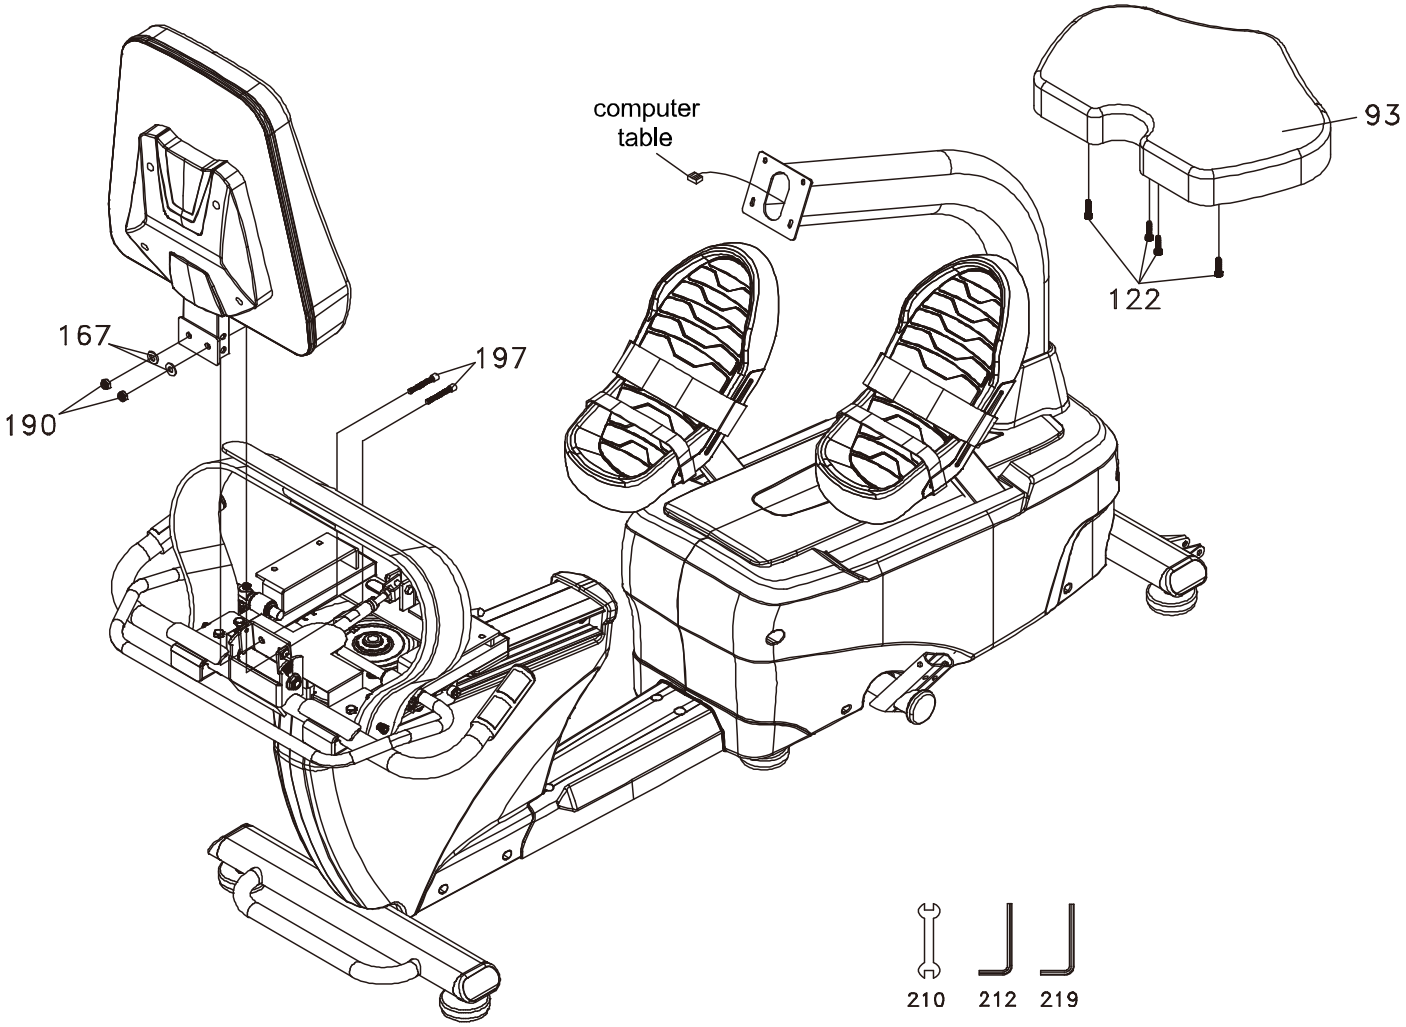

STEP 4: CONSOLE AND ARM ASSEMBLY

1. Connect the computer cable into the back of the console and install the console (29) onto the console mast and secure with the four 5mm x 12mm screws (143).
2. Install the left and right arms (3&4) and secure with the 3/8” x 5/8” bolts (216) and use the 3/8” flat washers (217) on the sides of the arms and the 3/8” curved washers (218) on the front and rear of the arms. Tighten the bolts very securely so the arms do not loosen up during use.

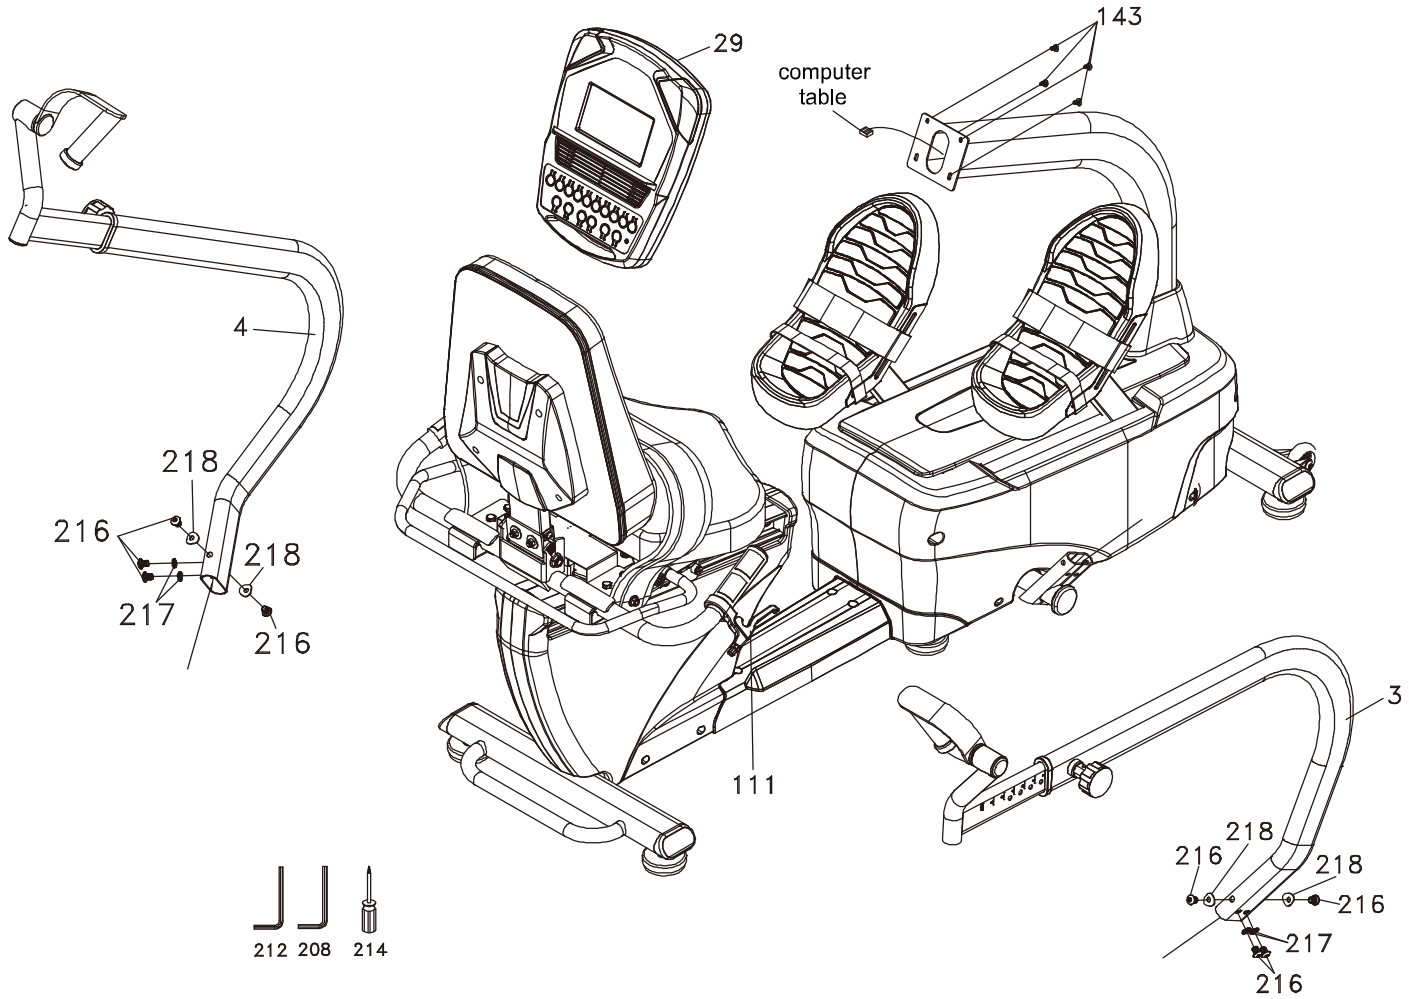

MS300 Exploded View Drawing

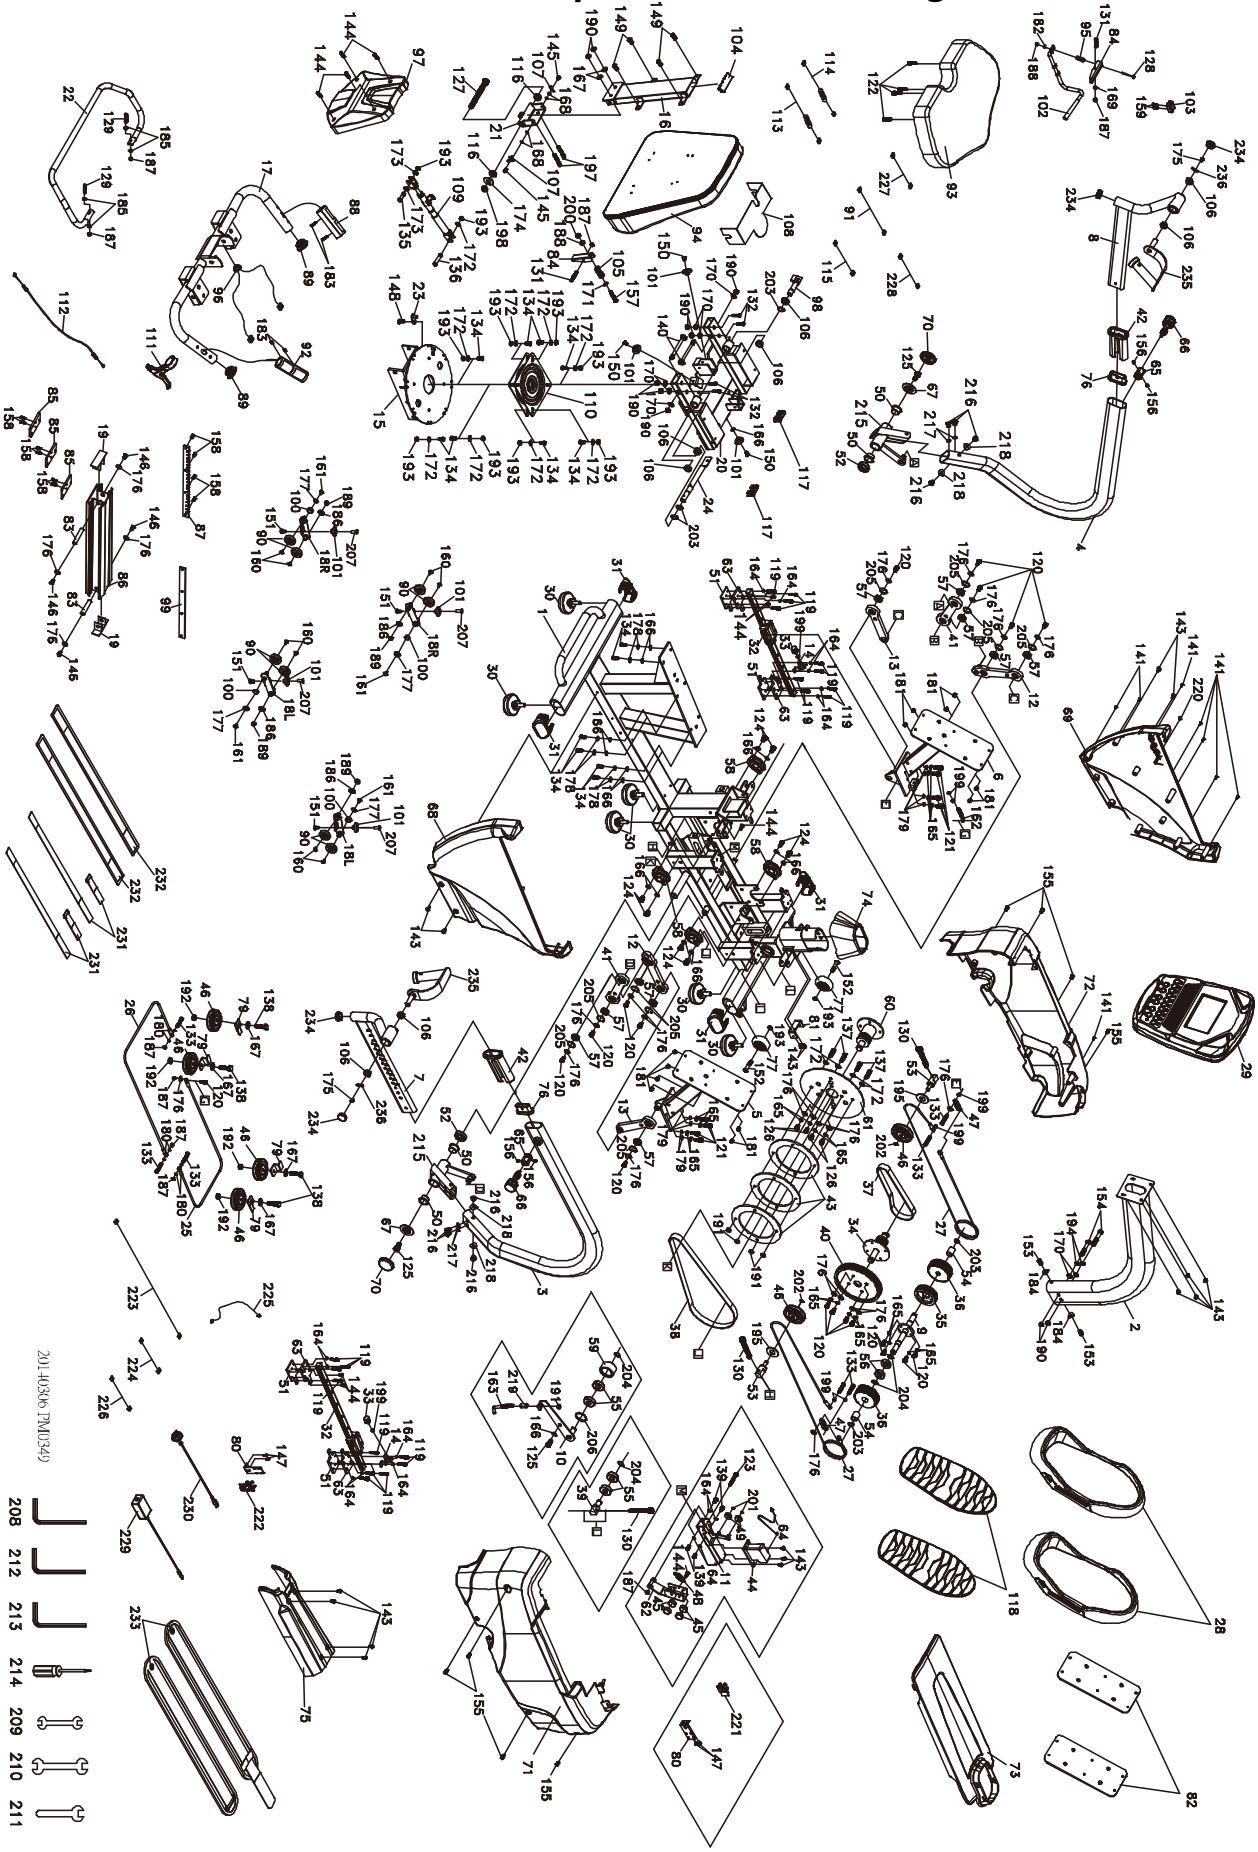

MS300 Parts List

Item #	Part Number	Description	Qty.
1	**CC010056**	Main Frame	1
2	**CC060069**	Console Mast	1
3	**CC030058**	Swing Arm (R)	1
4	**CC030059**	Swing Arm (L)	1
5	**CC040041**	Pedal Plate (R)	1
6	**CC040042**	Pedal Plate (L)	1
7	**CC060079**	Handle Slider (R)	1
8	**CC060080**	Handle Slider (L)	1
9	**C144004-Z3**	Drive Pulley	1
10	**B140014**	Idler Bracket	1
11	**B140013**	Brake Motor Bracket	1
12	**B140016**	Handle Bar Linkage	2
13	**B140015**	Upper Linkage	2
14	**B140012-Z3**	Rubber Cushion Bracket	2
15	**CC040039**	Seat Carriage	1
16	**CC040038**	Seat Back Bracket	1
17	**CC030054**	Handle Bar	1
18L	**CC060017**	Seat Wheel Adjustment Plate (L)	2
18R	**CC060018**	Seat Wheel Adjustment Plate (R)	2
19	**CC060067**	Seat Stop Assembly	2
20	**CC040036**	Rotate Seat Assembly	1
21	**CC040037**	Seat Back Bracket	1
22	**CC060072**	Seat Rotation Release Lever	1
23	**CC060071**	Cantilever Anchor Assembly	1
24	**C144001**	Adjusting Lever	1
25	**K020072**	Front Connecting Cable	1
26	**K020073**	Rear Connecting Cable	1
27	**K020074**	Drive Cable	2
28	**P130022A**	Pedal	2
29	**ZSS001-01**	Console Assembly	1
30	**P270010A**	Rubber Foot	6
31	**P040075C-KA**	End Cap, Oval Stabilizer Tube	4
32	**K132009**	Linear Slider	2
33	**P270062**	Rubber Cushion	2
34	**C144003-Z3**	Passive Wheel	1
35	**C120057-Z3**	Drive Wheel	1
36	**C120056-Z5**	Cable Guide Wheel	2
37	**N010011**	Belt (8PJ), 584mm	1
38	**N010012**	Belt (8PJ), 1032mm	1

39	**C120055-Z3**	Adjustable Idler Wheel Axle	1
40	**P260011-A1**	Drive Pulley	1
41	**B030087**	Lower Linkage	2
42	**P040165**	Slider Sleeve	2
43	**B020112-Z3**	Flywheel Mass	3
44	**F090301**	Gear Motor	1
45	**N041001**	Braking Magnet	4
46	**P050043**	Roller	6
47	**K010062-Z1**	Cable Spring	2
48	**K010063-Z1**	Gear Motor Spring	1
49	**C030500-Z3**	Steel Cable Roller	2
50	**P270061**	Plastic Bushing	4
51	**N200070**	Rubber Pad	4
52	**C080302-Z2**	Flywheel Axle Set Collar (R)	2
53	**C120054-Z3**	Cable Guide Wheel Axle	2
54	**K050004**	One Way Bearing	2
55	**K056203**	Ball Bearing (6203)	4
56	**K056003**	Ball Bearing (6003)	2
57	**K056902**	Ball Bearing (6902)	10
58	**K051011**	Cable Roller Bearing	4
59	**C080054-Z3**	Axle Sleeve	1
60	**C144002-Z3**	Aluminum Disc Drive Pulley	1
61	**B020113**	Aluminum Brake Disc	1
62	**B130255-Z3**	Magnet Bracket	1
63	**B030088-Z3**	Rubber Isolation Mount	4
64	**K020075**	Gear Motor Cable	1
65	**C100017**	Knob Barrel Nut	2
66	**P060388**	Adjustment Knob	2
67	**B139102-Z3**	Cup Washers	2
68	**P100125-KF**	Rear Shroud (R)	1
69	**P100124-KF**	Rear Shroud (L)	1
70	**P180041-KF**	End Cap	2
71	**P100172-KF**	Shroud (R)	1
72	**P100171-KF**	Shroud (L)	1
73	**P100170-KF**	Top Cover	1
74	**P100169-KF**	Console Mast Cover	1
75	**P190044-KF**	Bottom Step Cover	1
76	**P040166**	Slide End Cap Spacer	2
77	**P050021-A1**	Transportation Wheel	2
79	**B130264-Z3**	Shroud Bracket	4
80	**B070065-Z3**	Sensor Bracket	2

81	**B110028-Z3**	Shroud Fixing Plate	1
82	**N200072**	Pedal Isolation Rubber	2
83	**C030026**	Seat Stop Axle	2
84	**B112200-Z3**	Seat Position Latch	2
85	**B031800-Z3**	Backing Plate	3
86	**M020002-Z0**	Aluminum Track	1
87	**B135300-Z3**	Rack, Seat Position	1
88	**F090250-01**	Hand Pulse W/Cable Assembly (L)	1
89	**P060253-A1**	Button Head Plug	2
90	**P050016-A1**	Seat Track Wheel	8
91	**E030042**	Hand Pulse Extension Cable	1
92	**F090251-01**	Hand Pulse W/Cable Assembly (R)	1
93	**N120024**	Seat Cushion	1
94	**N120008**	Seat Back	1
95	**K010006-Z1**	Spring, 13.5 x 30	1
96	**P040042-A1**	HGP Wire Grommet	1
97	**P190021-KF**	Seat Back Cover	1
98	**C060040**	Adjusting Lever Rotate Axle (L)	1
99	**B020003-Z3**	Seat Track Fixing Plate	1
100	**C070095-Z3**	Sleeve	4
101	**P050027-A1**	PU Wheel	7
102	**C120100-Z1**	Seat Front/Aft Adjustment Lever	1
103	**P270006**	Lever Anchor	1
104	**P040074-A1**	Square End Cap	1
105	**K010045-Z1**	Spring, 13.5 x 60L	1
106	**P040155**	Powder Metal Sleeve	8
107	**B139602-Z1**	Scale Arrowhead	2
108	**B130225**	Safety Cover	1
109	**K070024**	Locking Gas Cylinder	1
110	**N200065**	Rotate Disk	1
111	**K040001**	Release Lever (Left)	1
112	**K020008-Y3**	Steel Cable	1
113	**E030213-01**	Hand Pulse Wire, Right	1
114	**E030214-01**	Hand Pulse Wire, Left	1
115	**E030070**	Hand Pulse Wire, SMP-2V+300mm	1
116	**P040157**	Powder Metal Sleeve	2
117	**P040039-A1**	Square End Cap	2
118	**P120031**	Pedal Foam Cushion	2
119	**J032005-ZI**	Socket Head Cap Bolt, M5xP0.8x25	20
120	**J032503-ZI**	Socket Head Cap Bolt, M6x1.0x15L	19
121	**J032504-Z1**	Socket Head Cap Bolt, M6x1.0x20L	8

122	**J032505-Z1**	Socket Head Cap Bolt, M6×P1.0×25L	4
123	**J032510-Z4**	Socket Head Cap Bolt, M6x1.0x50L	1
124	**J033002-Z1**	Socket Head Cap Bolt, M8xP1.25x12L	8
125	**J033004-Z1**	Socket Head Cap Bolt, M8xP1.25x20L	3
126	**J032502-Z9**	Socket Head Cap Bolt, M6x1.0x12L	4
127	**J035015G-Z1**	Socket Head Cap Bolt, M12 × P1.75 × 120L	1
128	**J032009W-Z1**	Socket Head Cap Bolt, M5 × 45-10mm	1
129	**J032508W-Z1**	Socket Head Cap Bolt, M6 × P1.0 × 40L	2
130	**J033522-Z1**	Socket Head Cap Bolt, M10x1.5x75L	3
131	**J032513I-ZQ**	Socket Head Cap Bolt, M6 × 38mm	2
132	**J011008-Z1**	Hex Head Bolt, 3/8" × 2"	4
133	**J012508-Z1**	Hex Head Bolt, M6x1.0x40L	7
134	**J010502-Z1**	Hex Head Bolt, 5/16"×3/4"	14
135	**J010505Y-Y4**	Hex Head Bolt, 5/16"×UNC18×1-1/4", 12L	1
136	**J010507-Z1**	Hex Head Bolt, 5/16"×UNC18×1-3/4"	1
137	**J013005-Z1**	Hex Head Bolt, M8x1.25x25L	4
138	**J013508-Z1**	Hex Head Bolt, M10x1.5x40L	4
139	**J032002-Z4**	Socket Head Cap Bolt, M5xP0.8x12	4
140	**J011013-Z1**	Hex Head Bolt, 3/8" × 3-1/4"	2
141	**J396804-Z1**	Phillips Head Self-Tapping Screw, Ø3.5x12	8
143	**J092002-Z1**	Phillips Head Screw, M5xP0.8x12L	17
144	**J092004-Z1**	Phillips Head Screw, M5xP0.8x20L	10
145	**J092014-Z1**	Phillips Head Screw, M5 × 6L	2
146	**J092501-Z1**	Phillips Head Screw, M6x10L	4
147	**J094501-Z1**	Phillips Head Screw, M4x10L	4
148	**J020502-Z1**	Button Head Socket Bolt, 5/16"×UNC18×3/4"	1
149	**J023004-Z1**	Button Head Socket Bolt, M8×P1.25×20L	4
150	**J023005-Z1**	Button Head Socket Bolt, M8×P1.25×25L	3
151	**J022501-Y3**	Button Head Socket Bolt, M6 × 10L	4
152	**J020507AB-Z1**	Button Head Socket Bolt, 5/16"x1-3/4"	2
153	**J013002-Z1**	Hex Head Bolt, M8x1.25x12L	2
154	**J011010AB-Z1**	Hex Head Bolt, 3/8"×UNC16×2-1/2"x19L	2
155	**J352002-Z1**	Phillips Head Screw, M5x12L	8
156	**J354513-Z1**	Phillips Head Screw, M4x4L	4
157	**J352018-Z1**	Phillips Head Screw, M5×P0.8×70	1
158	**J552002-Z1**	Flat Head Phillips Screw, M5x0.8x12L	10
159	**J552005-Z1**	Flat Head Phillips Screw, M5 × 25	2
160	**J562001-Z1**	Phillips Screw, M5 × 0.8 × 10L	8
161	**J602501-ZQ**	Flat Head Phillips Screw, M6 × 10L	4
162	**J082514-Z1**	Eye Bolt, M6xP1.0x57L	1
163	**J083010M-Z1**	J Bolt, M8xP1.25x80L	1

164	**J260008-Z1**	Split Washer, 5mm	16
165	**J260009-Z1**	Split Washer, 6mm	20
166	**J260007-Z1**	Split Washer, 8mm	16
167	**J210008-Z1**	Flat Washer, 10mm x 25mm	6
168	**J210006-Z1**	Flat Washer, 5mm × 12mm × 1.0T	4
169	**J210016-Z1**	Flat Washer, 1/4" × 13 × 1T	1
170	**J210003-Z1**	Flat Washer, 3/8" × 19 × 1.5T	8
171	**J210040-Z1**	Flat Washer, 5.5mm × 15mm	1
172	**J210059-Z1**	Flat Washer, 8.5mm × 18mm	13
173	**J210042-Z1**	Flat Washer, 8.5mm × 26mm	2
174	**J210063-Z1**	Flat Washer, 1/2" × 1"	1
175	**J032501-ZP**	Socket Head Cap Bolt, M6 × 1.0 × 10L	2
176	**J210017-Z1**	Flat Washer, 1/4" x 3/4"	25
177	**J210023-Y3**	Flat Washer, 1/4" × 16 × 1.0T	4
178	**J210032-Z1**	Flat Washer, 5/16"x16mmx1.5T	6
179	**J210048-Z1**	Flat Washer, 6.6mm x 12mm	8
180	**J210082-Z1**	Flat Washer, 6.2mm x 8mm	6
181	**J092003-ZP**	Phillips Head Screw, M5xP0.8x15L	12
182	**J210004-Z1**	Flat Washer, 3/16" × 3/8"	1
183	**J517007-Z1**	Self Tapping Screw, 3mm × 20mm	4
184	**J220001-Z1**	Curved Washer, 8mm x 23mm	2
185	**J220003-Z1**	Curved Washer, 5/16" × 3/4"	4
186	**J230001-Z1**	Knurled Lock Washer, 8mm × 18mm	4
187	**J139601-Z1**	Nyloc Nut, M6xP1.0x6T	9
188	**J139161-Z1**	Nyloc Nut, M5 × 5.0T	2
189	**J139261-Y3**	Nyloc Nut, M8 × 7T	4
190	**J139011-Z1**	Nyloc Nut, 3/8"	10
191	**J139266-Z1**	Nyloc Nut, M8xP1.25x6T	5
192	**J139361-Z1**	Nyloc Nut, M10xP1.5x8T	4
193	**J139061-Z1**	Nyloc Nut, 5/16"×UNC18	12
194	**J260003-Z1**	Split Washer, 3/8"	2
195	**J210083-Z1**	Flat Washer, 45mm × 21.8mm	2
197	**J031007Z-Z4**	Socket Head Cap Bolt, 3/8"×UNC16×1-3/4"	2
198	**J139311-Z1**	Nyloc Nut, M12×P1.75×8T	1
199	**J129621-Z1**	Nut, M6x5T	8
200	**J129171-Z1**	Nut, M5×P0.8×4T	1
201	**J590004-Z4**	E-Clip, 5mm	2
202	**J310003-Z4**	C-Clip, 10mm	2
203	**J310005-Z4**	C-Clip, 16mm	5
204	**J310002-Z4**	C-Clip, 17mm	4
205	**J670001-Z4**	Inner Snap Ring, 28mm	10

206	**J670002-Z4**	Inner Snap Ring, 40mm	1
207	**J160007-Y3**	Nut, M6 × 19L	4
208	**J330039-Z1**	L Allen Wrench, M6	1
209	**J330028**	Wrench, 12/14mm	1
210	**J330027**	Wrench, 13/14mm	1
211	**J330043-Z1**	Wrench, 10mm	1
212	**J330038-Z1**	L Allen Wrench, M5	1
213	**J330012-Z1**	L Allen Wrench, M8	1
214	**J330008**	Phillips Head Screw Driver	1
215	**CC030060**	Swing Arm Drive Weldment	2
216	**J021003-ZJ**	Button Head Socket Bolt, 3/8" × UNC16 × 5/8"	8
217	**J210003-ZJ**	Flat Washer, 3/8"	4
218	**J220007-ZJ**	Curved Washer, 3/8"	4
219	**C070081-Z4**	Transportation Wheel Sleeve	1
220	**P280004-A1**	Dummy Plug	1
221	**D151001**	Optical Sensor Board	1
222	**D151101**	Hall Sensor Board	1
223	**E020456**	Computer Console Cable	1
224	**F030501**	Encoder Cable	1
225	**E060737**	DC Power Cable	1
226	**F030502**	Hall Sensor Cable	1
227	**E030216**	Hand Pulse Cable, Upper	1
228	**E030217**	Hand Pulse Cable, Lower	1
229	**F080048**	Power Adapter, 12VDC	1
230	**E061004**	Power Adapter Line Cord	1
231	**N060014**	Foot Strap, Narrow	2
232	**N060015**	Foot Strap, Wide	2
233	**N060016**	Seat Belt	1
234	**P040050**	Round End Cap	4
235	**CC030049**	Swivel Handle	2
236	**B020119-Y3**	Swivel Handle Range Limiter	2

Maintenance:

1. Wipe down all areas in the sweat path with a damp cloth after each use to prevent rust.
2. If a squeak, thump, clicking or rough feeling develops the main cause is most likely one of two reasons:
    1) The hardware was not sufficiently tightened during assembly. All bolts that were installed during assembly need to be tightened as much as possible. It may be necessary to use a larger wrench than the one provided if you cannot tighten the bolts sufficiently. I cannot stress this point enough; 90% of calls to the service department for noise issues can be traced to loose hardware.
    2) The crank arm nut and/or the pedals need to be retightened.
3. If squeaks or other noises persist, check that the unit is properly leveled. See page 6 for leveling instructions.

Maintenance Menu in console software:

The console has built in maintenance/diagnostic software. The software will allow you to change the console settings from English to Metric and turn off the beeping of the speaker when a key is pressed for example. To enter the Maintenance menu (may be called Engineering mode, depending on version) press and hold down the Start, Stop and Enter keys. Keep holding the keys down for about 5 seconds and the message window will display “Engineering mode”. Press the enter button to access the menu below:

1. Key Test
2. LCD test
3. Functions >
    - Sleep mode – on
    - Pause mode - on (If pause mode is off then console will remained Paused indefinitely, unless Stop or Start is pressed again).
    - Odometer reset
    - Units – English or Metric
4. Service
    - Motor test
        - Runs resistance motor from level 1~20 and then 20~1.
        - Position sensor value is shown in STEPS data window.
    - Sensor Test
        - SPM window shows reflector sensor #1 signal (1 or 0)
        - CALORIES window shows reflector sensor #2 signal
        - TIME window show Left step position counter
        - STEPS window show Right step position counter
        - PULSE window show speed sensor signal (on or off)

Specifications:

Dimensions:Length = 67” (172cm), Width = 30” (77cm), Height = 48” (122cm)

Weight: 242 lbs. (110 kg)

Patient weight capacity: 440 lb. (200 kg)

Power: 90~260 VAC, 47~63 Hz

Resistance: Isokinetic with 20 levels of effort.

Work Load: 5 watts up to 750 watts.

Readouts: Time and Segment time remaining, SPM, Steps, Watts (Left and Right), METs, Symmetry Index, Heart Rate, Calories, Work Level

Manufacturer's Limited Warranty

Effective July 15, 2013 – SEMI-RECUMBENT SEATED STEPPER LIMITED WARRANTY

Spirit Medical Systems Group warrants this product for a period of time listed below from the date of retail sale as determined by a sales receipt or in the absence of a sales receipt, eighteen (18) months from the original factory shipping date. Spirit's responsibilities include providing new or remanufactured parts, at Spirit's option, and technical support to our independent dealers and servicing organizations. In the absence of a dealer or service organization, these warranties will be administered by Spirit directly to a consumer. The warranty period applies to the following components:

WARRANTY	Frame	Mech. Parts	Electronics	Wear Items *	Labor
Commercial	Lifetime	3 years	3 years	1 year	1 year

*** Wear items are rubber hand grips, pedals, console overlay and drive belts**

NORMAL RESPONSIBILITIES OF THE CONSUMER
This warranty applies to products in clinical use up to 5 hours per day. The consumer is responsible for the items listed below:
1. The warranty registration card must be completed and returned to the address listed on the card within 10 days of the original purchase to validate the manufacturer's limited warranty or register online at www.spiritmedicalsystems.com
2. Proper use of the unit in accordance with the instructions provided in this manual, including maintenance.
3. Proper connection to a power supply of sufficient voltage, replacement of blown fuses, repair of loose connections or defects in facility wiring.
4. Expenses for making the unit accessible for servicing, including any item that was not part of the unit at the time it was shipped from the factory.
5. Damages to the unit finish during shipping, installation or following installation.

EXCLUSIONS
This warranty does not cover the following:
1. CONSEQUENTIAL, COLLATERAL, OR INCIDENTAL DAMAGES SUCH AS PROPERTY DAMAGE AND INCIDENTAL EXPENSES RESULTING FROM ANY BREACH OF THIS WRITTEN OR ANY IMPLIED WARRANTY.
Note: Some states do not allow the exclusion or limitation of incidental or consequential damages, so this limitation or exclusion may not apply to you.
2. Service call reimbursement to the consumer. Service call reimbursement to the dealer that does not involve malfunction or defects in workmanship or material, for units that are beyond the warranty period, for units that are beyond the service call reimbursement period, or units not requiring component replacement.
3. Damages caused by services performed by persons other than authorized Spirit service companies, use of parts other than original Spirit parts, or external causes such as alterations, modifications, abuse, misuse, accident, improper maintenance, inadequate power supply, or acts of God.
4. Products with original serial numbers that have been removed or altered.
5. Products that have been; sold, transferred, bartered, or given to a third party.
6. Products that are used as store display models.
7. Products that do not have a warranty registration on file at Spirit. Spirit reserves the right to request proof of purchase if no warranty record exists for the product.
8. THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR PURPOSE.

SERVICE
Keep your bill of sale. Twelve (12) months from the date on the bill of sale or eighteen (18) months from the date of factory shipping as determined by the serial number establishes the warranty period should service be required. If service is performed, it is in your best interest to obtain and keep all receipts. This written warranty gives you specific legal rights. You may also have other rights that vary from state to state. Service under this warranty must be obtained by following these steps, in order:
1. Contact your selling authorized Spirit dealer. OR
2. Contact your local authorized Spirit service organization.
3. If there is a question as to where to obtain service, contact our service department at (870) 935-1107.
4. Spirit's obligation under this warranty is limited to repairing or replacing, at Spirit's option, the product through one of our authorized service centers. All repairs must be preauthorized by Spirit. If the product is shipped to a service center freight charges to and from the service center will be the customer's responsibility. For replacement parts shipped while the product is under warranty, the customer will be responsible for shipping and handling charges. For in-facility service, the customer will be responsible for a trip charge. There will be an additional trip charge if the customer is located over 100 miles from the nearest service center.
5. The owner is responsible for adequate packaging upon return to Spirit. Spirit is not responsible for damages in shipping. Make all freight damage claims with the appropriate freight carrier. DO NOT SHIP ANY UNIT TO OUR FACTORY WITHOUT A RETURN AUTHORIZATION NUMBER. All units arriving without a return authorization number will be refused.
6. For any further information, or to contact our service department by mail, send your correspondence to:

Spirit Medical Systems Group
P.O. Box 2037
Jonesboro, AR 72402-2037

Product features or specifications as described or illustrated are subject to change without notice. All warranties are made by Spirit Medical Systems Group. This warranty applies only in the 48 contiguous United States. NOTE: This warranty does not apply to Alaska or Hawaii

www.spiritmedicalsystems.com/

© 2013 All Rights Reserved.
MS ***300*** Owner's Manual
I1 40407-A1, Rev. 1